RealEstate BLINDS

MEASURING GUIDE

MEASURING WINDOWS FOR BLIND SIZES

YOU WILL NEED A metal tape measure, plus a pen and paper or a phone to record sizes.


Measure in **millimetres (mm)**. Keep the tape straight and level; double-check each reading.

MEASURE THE OPENING. WE MAKE THE DEDUCTIONS.

For an inside mount, measure the **reveal**: the actual window opening, from inside edge to inside edge. **Do not deduct for brackets, mechanisms or fabric.**

01 INTERNAL / INSIDE MOUNT

The blind fits inside the window reveal.

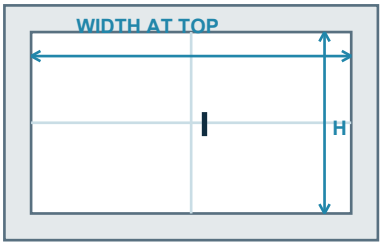


Measure between the inside edges

Measure the opening near the **top**, where the roller blind will sit. Measure height from the inside top to the sill. See the product rules below.

02 EXTERNAL / OUTSIDE MOUNT

The blind overlaps the window opening.

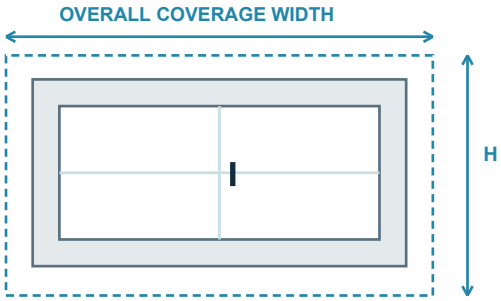

Measure the **overall area to cover**: across the outer edges of the architrave, or the agreed wall coverage. Take height from the proposed fixing point to the desired finish.

How many measurements?

ROLLER BLINDS

1 width near the top
+ **1 height** is sufficient.

VENETIAN & VERTICAL BLINDS

3 widths: top, middle and bottom.
3 heights: left, middle and right.
Record and send all six reveal measurements.

Outside mount? Record the reveal measurements above and label your proposed overall coverage width and height separately. Confirm coverage with us before ordering.

CHECK FOR OBSTRUCTIONS

Look for handles, locks, winders, tiles, security screens and projecting sills. Check reveal depth and clearance for the blind and opening window or door. Send photos of anything in the way.

SEND YOUR MEASUREMENTS WITH

Property address, room/window, blind type, inside/outside mount and clear photos.

1300 215 388 | pm@realestateblinds.com.au